

**Mercedes Sprinter 2018 Onwards Fuel Pickup Instructions**

**Suitable For the Following Vehicles**

Mercedes Sprinter 2018 Onwards

**Suitable For the Following Heater Kits**

Airtronic S2/S3 D2L

Hydronic S3 HS3 D5E

AM2/AM3 D4L-D4R

Included	
Description	Quantity
Fuel Line Blue	2m
7.5 x 4.5 Elbow	1 pcs
Fuel Hose	1 pcs
9mm Fuel Hose Clamp	3 pcs
11mm Fuel Hose Clamp	1 pcs



**NOTE | Please ensure that the fuel tank is lowered in order to access the fuel port**

To access the auxiliary fuel port, lower the fuel tank without the need to remove the sender unit (see Figure 3). Trim the tip off the fuel port nipple to create an opening sufficient to insert the blue fuel line.

Follow the assembly instructions outlined in Figure 4. Secure the line at the smallest end A using the provided clip, ensuring a dip line length of 215mm, and cut the dip pipe end at a 45-degree angle.

Once assembled, thread the blue line through the fuel port and affix the elbow end B (largest end) over the fuel port, securing it with the provided clip.

Route the remaining line to the fuel pump, using the remaining rubber hose and clip for secure attachment.

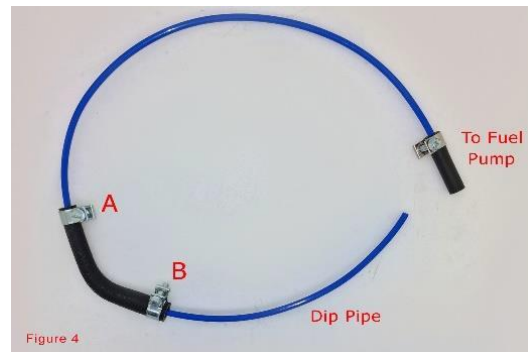


Figure 3

Auxiliary Port