

29.2199.01.6089

RENAULT MASTER, VAUXHALL MOVANO FITTING INSTRUCTIONS

APPLICABLE FOR ALL VEHICLES WITH 8MM FUEL LINE RETURN PIPES

**IMPORTANT!**

If the vehicle has two black fuel line return pipes, the alternative 10mm Tee-Piece Kit 29.2199.01.6088 **MUST** be used. This should be fitted into the larger 10mm black fuel line.

Cut the **8mm Return** fuel line, using a set of pipe cutters, just in front of the fuel tank on the inside of the chassis on the nearside of the vehicle, as shown in the photograph (*Figure 1*).

Do not use side cutters or any other unspecified tool to cut the fuel line.

Insert the two 8mm sleeves into both sides of the cut, this is to avoid collapsing the fuel line when tightening the clips.

Fit the fuel rubbers (**A 7.5id x 12.5od**) onto the tee-piece and tighten using two of the **12mm** fuel clips (**B**), push the original fuel lines into this rubber ensuring that the fuel line is butted up to the tee-piece and tighten using the remaining **12mm** fuel clips.

Fit the fuel rubber (**C 5 x 3mm**) onto the tee-piece and tighten using the **11mm** fuel clip (**D**). The fuel line in the heater kit can now be attached to the tee-piece.

Always ensure that the tee-piece is pointing in a downwards position, if in any doubt during this installation please check with Eberspächer UK.

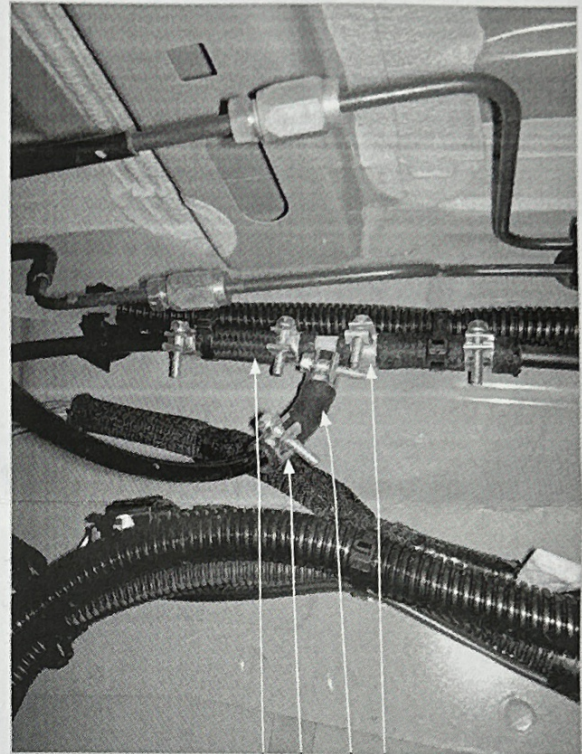


Figure 1

(A) 7.5id x 12.5od

(B) 12mm

(D) 11mm

(C) 5 x 3mm